

INSTALLATION INSTRUCTIONS

View installation video, drawings and specifications on our website – www.transpo.com

Before you begin:

- Mats should be stored at room temperature.
- Installation surface must be dry and clean from oil, contaminants, dust, dirt and debris.
- Temperature must be 50° and rising.
- New concrete is to cure for 28 days before mat installation.
- Step-Safe mats are designed for pedestrian safe zones and as such is not designed for or intended to be installed in vehicular traffic areas.

Inspect concrete and clean if required: Remove dust, dirt and debris from concrete surface with brooms or high pressure air. Grinding concrete surface may be necessary to obtain appropriate level of cleanliness. (Not recommended for asphalt surfaces.)

Installation: After following the Conditions outlined above in “Before you Begin”



1. Place mat on surface in desired final position, and mask outside edge. (If required cut mat to match ramp geometry.*)




2. Mask outside edge.




3. Remove mat.



4. Mix adhesive supplied in pre-proportioned containers (1-2 min).

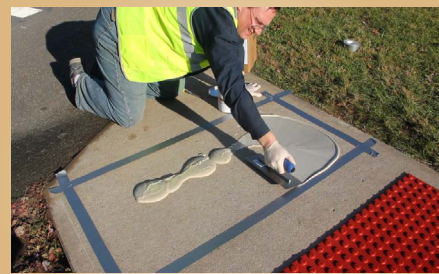

5. Spread adhesive over the surface using a 3/16” V notched trowel.

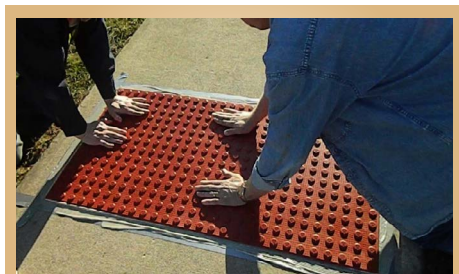

6. Place the Step-Safe[®] mat onto fresh adhesive avoiding air pockets.**



7. Clean off excessive adhesive and remove marking.



8. After adhesive has cured apply silicone caulking to seal mat edges.

*NOTE: When installing multiple mats leave a 1/8” expansion gap between mats.

**NOTE: To assist proper installation and avoid air pockets, place a piece of plywood over the entire surface and add weight until the adhesive has cured.